 
 



1. Connect the OLAS app to the Core. For more information on how to do this please refer to the Core Setup Instructions.

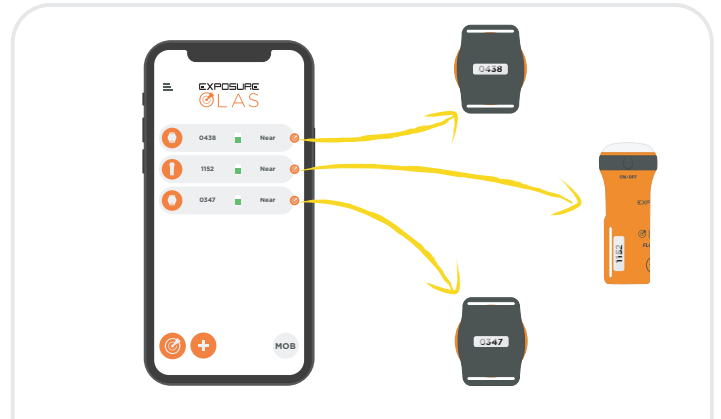

2. Ensure all OLAS transmitters are seen on the OLAS app homescreen.

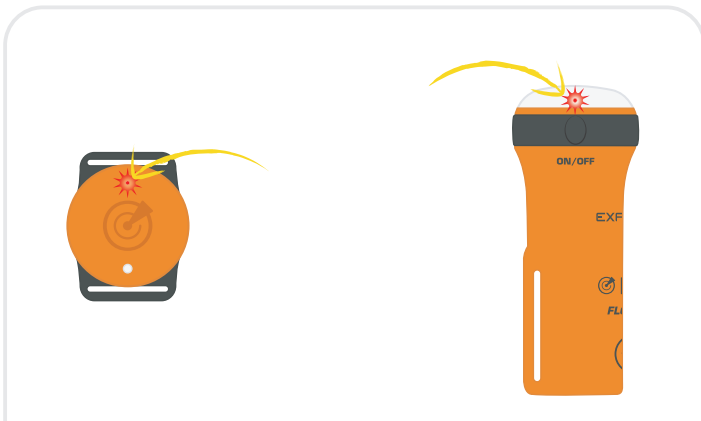

 
3. Switch off the OLAS transmitters.
OLAS tag: press the button for 4 seconds, until a red flash is seen.
OLAS Float-On: press the button for 4 seconds until the bi-colour turns red.

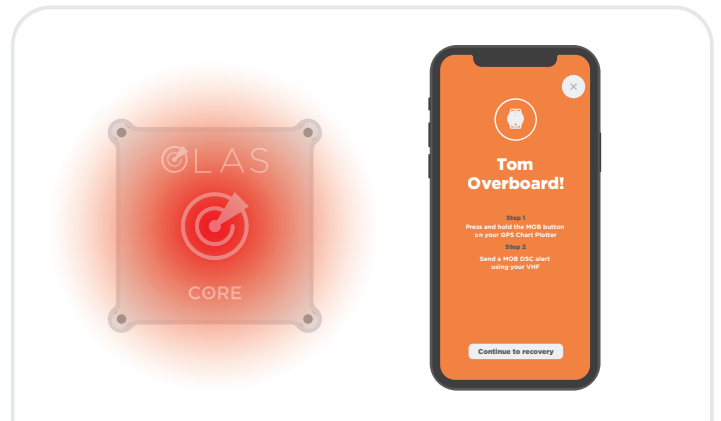


4. The alarm will occur after you set 'Alert time' which has a default of 3 seconds.



 5. Press the control switch on the Core once. This puts the system into pause.

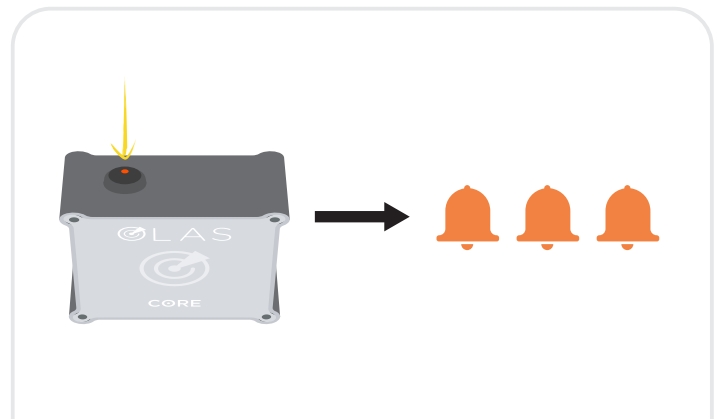

 
6. Press the control switch again once. 3 beeps will sound to indicate that the transmitter is still missing, and the system is still in pause state.

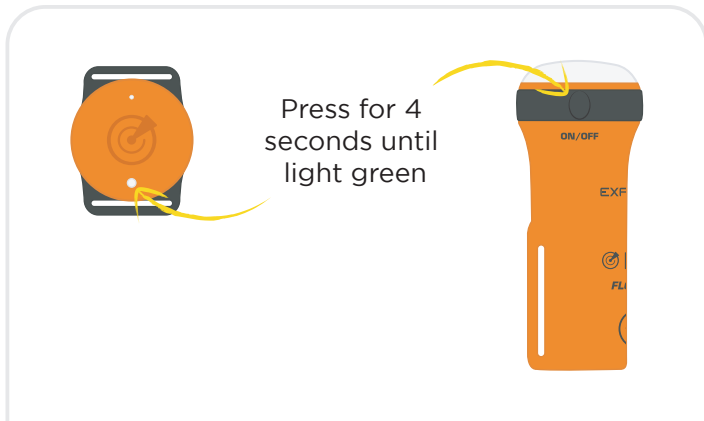

7. Switch the OLAS transmitter back ON.



 8. Place the transmitter next to the Core.

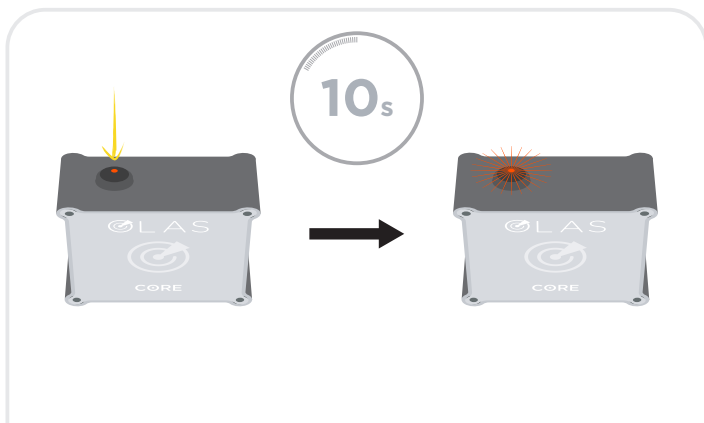

9. Press the control switch once. Wait 10 seconds and the system will be operating again. Solid red on the control switch indicates it is tracking correctly.