

Set Initial Wind

Select Performance Screen




Head upwind and touch O



Change tack and touch O



Touch □ to cycle mode

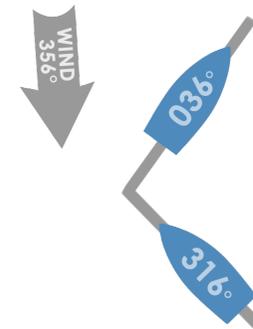

TOUCH ○

TOUCH ○

Grab Gun

Select Prestart Screen



When you hear the gun or see the flag, touch O



Stop Timer



Sync to nearest minute when timer is stopped and adds a minute



Sync to nearest minute when timer is running timer keeps running



TOUCH ○

Capture Line

Select Prestart Screen




Touch 👓 to open menu



Touch ○ to capture pin  
Touch □ to capture RC



Touch 👓 to exit capture mode

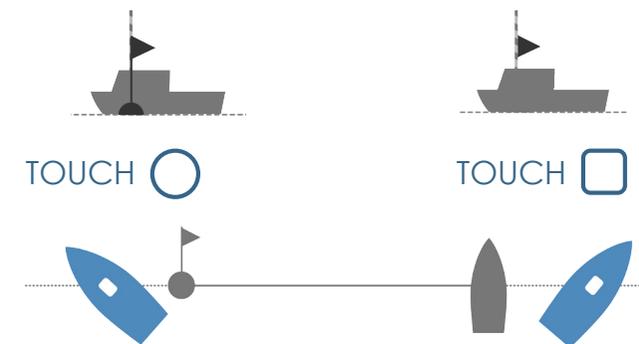

TOUCH ○

TOUCH □

Go Race!

That's it.

You don't need to touch the d10 again.

The d10 will do the rest.

The d10 will change screens after start and on windward and leeward legs and grab windward and leeward mark positions as you round them.

Want more?

See the d10 User Manual for the full list of functionality.