


microTALK[®]

Two-Way Radio Model MT 750



- Product Features**
- Two-Way Radio with up to a 5 km (3 mile) range
 - 8 Channels
 - 38 CTCSS Privacy Codes
 - Backlit LCD Display
 - Water Resistant
 - Battery Saver Circuitry
 - Maximum Range Extender
 - VOX Mode for Hands-Free Transmissions
 - Baby Monitor Function
 - Call Alert (5 Selectable Tones)
 - Scan (Channel, Privacy Code)
 - Dual Watch Programmable 2-Location Scan
 - Key Lock
 - Auto Squelch
 - Selectable On/Off "Roger Beep" Confirmation Tone
 - Selectable On/Off Keystroke Tone
 - Combination Speaker/Microphone/Charging Jack
 - Belt Clip
- *You are not allowed to use channels 1 and 2 in France. This situation can change, please contact the French radio licensing authority for more information.*

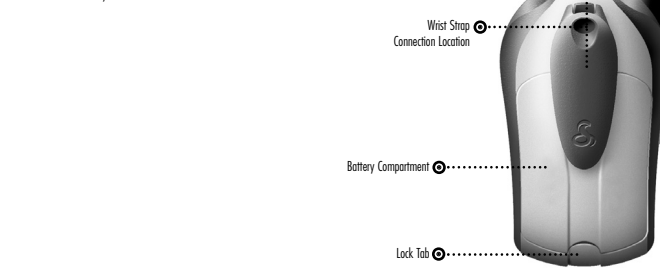

OPERATION

Product Information
This microTALK[®] radio has been manufactured to meet all required standards for radio equipment using PMR 446 frequencies as authorized. The use of this two-way radio product involves the public airways and its use may be subject to local laws or regulations. Contact your radio licensing authority for more information.

Radio Power
Each part can charge one radio. Uses 230 volt adaptor. Use only Cobra NiMH batteries, model GA-3ANH with charger model PA-CDB. Cobra recommends your radio is turned Off while being charged.

Caring for Your Radio
Your microTALK[®] radio will give you years of trouble-free service if cared for properly. Here are a few suggestions:

- Handle the radio gently.
- Keep it away from dust.
- Never put the radio in water or in a damp place.
- Avoid exposure to extreme temperatures.

Desktop Charger and Rechargeable Batteries
To Insert Batteries in Radio:

- Remove belt clip by releasing belt clip latch and sliding clip up.
- Pull down on lock tab to remove battery cover (on back of radio).

To Turn Your Radio On:
Press and hold the POWER button until you hear a series of audible tones indicating that the radio is On.

To Adjust the Volume:
Press the VOLUME UP or the VOLUME DOWN buttons.

To Turn Your Radio Off:
Press and hold the POWER button.

Battery Low Indicator
When battery power is low, the BATTERY LOW indicator will blink, indicating that batteries should be recharged or replaced.

Insert Batteries
If there are no transmissions within ten (10) seconds, the unit will automatically switch to Battery Save Mode and POWER SAVER will appear in the display. This will not affect the unit's ability to receive incoming transmissions.

Communicating with Another Person
To Talk To Another Person:

- Press and hold the TALK button.
- With the microphone about 5 cm (2 inches) from your mouth, speak in a normal voice.
- Release the button when you have finished talking and listen for a response. You cannot receive incoming calls while pressing the TALK button.

For Charging Cobra's microTALK[®] Radio(s):

- Insert radio(s) into the charger as shown.
- Insert round connector of 230 volt adaptor into jack on back of charger.
- Plug 230 volt adaptor into mains socket.

If charging light is not On, check position of radio. Radio should be upright. The charge indicator light will stay On as long as the radio is in the charging well, even after the batteries are fully charged. It normally takes about 15 hours to fully recharge batteries. Batteries will not be damaged if they stay in the charging well longer than that.

OPERATION

Listening for a Response
When You Have Finished Talking:

- Release the TALK button to receive incoming transmissions. Your microTALK[®] is always in LISTENING MODE except when the TALK, CALL or MODE buttons are pressed.

Display Illumination
To Illuminate Your Display:

- Press and release the LIGHT/MAX RANGE button to illuminate the display for ten (10) seconds.

Auto Squelch/Maximum Range Extender
Your microTALK[®] radio is equipped with Auto Squelch, which automatically shuts off weak transmissions and unwanted noise resulting from terrain, conditions, or from reaching your maximum range limit.

Volume
To Adjust the Volume:

- Press the VOLUME UP or the VOLUME DOWN buttons.

A triple beep sound is used to indicate that you have reached the minimum (1) or maximum (8) volume level.

Call Button
To Alert Another Person That You Are Calling:

- Press and release the CALL button.

The other person will hear a two (2) second ringing tone. You cannot receive transmissions while sending a call.

To Turn Maximum Range Extender On:

- Press and hold the LIGHT/MAX RANGE button for at least five (5) seconds until you hear two (2) beeps, indicating that the Maximum Range Extender is On.

To Turn Maximum Range Extender Off:

- Press and release the LIGHT/MAX RANGE button or change channels.

Channels
To Select a Channel:

- With the radio On, select any of the 8 channels by pushing the CHANNEL UP or CHANNEL DOWN button.

You can press and hold the CHANNEL UP or CHANNEL DOWN button for fast advance.

Lock Function
The LOCK button locks the CHANNEL UP, CHANNEL DOWN and MODE buttons to prevent accidental operation.

To Use the Lock Function:

- Press and hold the LOCK button for two (2) seconds to turn the Lock On or Off.

A double beep sound is used to confirm your Lock On or Off request. When the radio is in Lock Mode, the Lock icon will be displayed.

OPERATION and MODE FUNCTIONS

Combination Speaker/Microphone/Charging Jack
Your microTALK[®] radio can be fitted with an external speaker/microphone, freeing your hands for other tasks. This same jack also serves as the connecting point for an optional wall charger/adaptor.

To Attach a Speaker/Microphone:

- Open the speaker/microphone/charging tab on the top of your microTALK[®] radio.
- Insert the plug into the speaker/microphone/charging jack.

To Connect a Wall Charger/Adaptor:

- Open the speaker/microphone/charging tab on top of your microTALK[®] radio.
- Insert the wall charger/adaptor plug into the speaker/microphone/charging jack.

To Select a Privacy Code:

- After selecting a channel, press and hold the MODE button until the small numbers next to the channel number flash on the display.
- Press the CHANNEL UP or CHANNEL DOWN button to select a privacy code.
- When your desired privacy code is displayed, choose one of the following:

a. Press the MODE button to enter the new setting and proceed to other functions.

b. Press the LOCK button to enter the new setting and return to LISTENING MODE.

c. Do not press any buttons for fifteen (15) seconds to enter the new setting and return to LISTENING MODE.

Channel Scan
Your microTALK[®] radio can automatically scan channels (1 to 8).

To Scan Channels:

- Press the MODE button until the Scan icon and the channel number flash on the display.
- Press the CHANNEL UP or CHANNEL DOWN button to begin scanning channels.

The Scan icon will continue to be displayed when channel scan is On. Your radio will continue to scan all channels and stop at an incoming transmission is detected. Your radio will remain on that channel for ten (10) seconds.

While setting channel scan, if you do not press any buttons for fifteen (15) seconds your radio will automatically return to LISTENING MODE before you entered Mode Functions.

CTCSS Privacy Codes
CTCSS (Continuous Tone Coded Squelch System) is an advanced tone coding system allowing you to select one of 38 privacy codes to reduce incoming transmissions from other users on the channel.

To Set the VOX Sensitivity Level:

- Press the MODE button until the VOX icon flashes and the current sensitivity level is displayed.
- Press the CHANNEL UP or CHANNEL DOWN button to change the setting.

The current sensitivity level is displayed with the letter "L" and a number 1 to 5, 5 being the most sensitive level.

During an Incoming Transmission, You Can Choose From The Following:

- Press and hold the TALK button to communicate on that channel. Your radio will remain on that channel and return to LISTENING MODE.
- Press the CHANNEL UP or CHANNEL DOWN button to resume scanning channels.
- When you press the TALK button while scanning and not within ten (10) seconds of receiving a transmission, you will transmit on the channel on which you last received a transmission. This will return the radio to LISTENING MODE.

During Scanning (while not receiving a transmission), You Can Choose From The Following:

- Press the MODE button to enter the new setting and proceed to other functions.
- Press the LOCK button to enter the new setting and return to LISTENING MODE.
- Do not press any buttons for fifteen (15) seconds to enter the new setting and return to LISTENING MODE.

MODE FUNCTIONS

Dual Watch
Dual Watch allows you to simultaneously monitor any two (2) Dual Watch Locations:

- Dual Watch Location 1 – is always the channel/privacy code displayed before you entered Mode Functions. See "Channels" and "CTCSS Privacy Codes" sections for further details.
- Dual Watch Location 2 – will be stored in the radio. It can be edited and/or recalled for future engagements of Dual Watch Mode.

To Program Or Edit Dual Watch Location 2 And Engage Dual Watch Mode:

- Press the MODE button until the Dual Watch icon and the channel number flash on the display.
- Choose one of the following:

a. Select or edit a channel:

- Press the CHANNEL UP or CHANNEL DOWN button to select a channel (1 to 8).

b. Press the LOCK button to proceed to next available Mode Function.

c. Press the MODE button and proceed to the next available Mode Function.

MODE FUNCTIONS

During an Incoming Transmission, You Can Choose From The Following:

- Press and hold the TALK button to communicate on that channel. Your radio will remain on that channel and return to LISTENING MODE.
- Press the CHANNEL UP or CHANNEL DOWN button to resume scanning channels.
- When you press the TALK button while scanning and not within ten (10) seconds of receiving a transmission, you will transmit on the channel on which you last received a transmission. This will return the radio to LISTENING MODE.

During Scanning (while not receiving a transmission), You Can Choose From The Following:

- Press the MODE button to enter the new setting and proceed to other functions.
- Press the LOCK button to enter the new setting and return to LISTENING MODE.
- Do not press any buttons for fifteen (15) seconds to enter the new setting and return to LISTENING MODE.

MODE FUNCTIONS

To Turn Dual Watch On:
NOTE: Dual Watch Location 2 must be programmed to turn Dual Watch On.

- Set the first Dual Watch Location (channel/privacy code) you wish to monitor (see "Channels" and "CTCSS Privacy Codes" sections for further details).
- Press the MODE button until the Dual Watch icon and the channel number flash on the display.

To Turn Dual Watch Off:
Press the LOCK button to return to LISTENING MODE on either Dual Watch Location 1 or the last Dual Watch Location on which, during Dual Watch, you last received a transmission.

To Terminate Dual Watch:
Choose one of the following:

- Press the LOCK button to return to LISTENING MODE on either Dual Watch Location 1 or the last Dual Watch Location on which, during Dual Watch, you last received a transmission.
- Press the TALK button to return to LISTENING MODE on either Dual Watch Location 1 or the last Dual Watch Location on which, during Dual Watch, you last received a transmission.

Not pressing any buttons for fifteen (15) seconds will enter the Baby Monitor Mode setting as Off and return the radio to LISTENING MODE.

To Turn Off "Roger Beep" On or Off:
When you turn On your microTALK[®] radio for the first time, "Roger Beep" will be On.

To Turn "Roger Beep" On or Off:
When you turn On your microTALK[®] radio for the first time, "Roger Beep" will be On.

To Turn "Roger Beep" On or Off:
When you turn On your microTALK[®] radio for the first time, "Roger Beep" will be On.

To Turn "Roger Beep" On or Off:
When you turn On your microTALK[®] radio for the first time, "Roger Beep" will be On.

MODE FUNCTIONS

Baby Monitor
With the Baby Monitor Function on, a radio left near a baby will transmit to another unit on the same channel and privacy code whenever a sound is detected. Baby Monitor uses the same sensitivity level you set for the VOX Function. If you have not set a VOX sensitivity level (see the "Voice Activated Transmit (VOX)" section of this manual), the maximum sensitivity level 5 will automatically be used.

To Turn Baby Monitor On:

- Press MODE button until the Baby Monitor icon flashes on the display. The current Off setting is displayed.
- Press the CHANNEL UP or CHANNEL DOWN button to turn Keystroke Tones On or Off.

To Turn Baby Monitor Off:
Press the LOCK button to return to LISTENING MODE on either Dual Watch Location 1 or the last Dual Watch Location on which, during Dual Watch, you last received a transmission.

To Turn Baby Monitor On or Off:
When you turn On your microTALK[®] radio for the first time, "Roger Beep" will be On.

To Turn "Roger Beep" On or Off:
When you turn On your microTALK[®] radio for the first time, "Roger Beep" will be On.

To Turn "Roger Beep" On or Off:
When you turn On your microTALK[®] radio for the first time, "Roger Beep" will be On.

To Turn "Roger Beep" On or Off:
When you turn On your microTALK[®] radio for the first time, "Roger Beep" will be On.

To Turn "Roger Beep" On or Off:
When you turn On your microTALK[®] radio for the first time, "Roger Beep" will be On.

MODE FUNCTIONS

Keystroke Tones
With Keystroke Tones turned On, your radio will sound beeps each time you press a button or change a setting.

To Turn Keystroke Tones On or Off:
When you turn On your microTALK[®] radio for the first time, Keystroke Tones will be On.

To Turn Keystroke Tones On or Off:
When you turn On your microTALK[®] radio for the first time, Keystroke Tones will be On.

To Turn Keystroke Tones On or Off:
When you turn On your microTALK[®] radio for the first time, Keystroke Tones will be On.

To Turn Keystroke Tones On or Off:
When you turn On your microTALK[®] radio for the first time, Keystroke Tones will be On.

To Turn Keystroke Tones On or Off:
When you turn On your microTALK[®] radio for the first time, Keystroke Tones will be On.

To Turn Keystroke Tones On or Off:
When you turn On your microTALK[®] radio for the first time, Keystroke Tones will be On.

To Turn Keystroke Tones On or Off:
When you turn On your microTALK[®] radio for the first time, Keystroke Tones will be On.

D.O.C., WARRANTY & CUSTOMER SERVICE

Declaration of Conformity
This declaration is the responsibility of the manufacturer/importer
Cobra Electronics Europe Limited
Dunage House
Northumberland Avenue
Dun Laoghaire
County Dublin, Ireland
Date: 21 November 2005
This certifies that the following designated product
PRIVATE MOBILE RADIO: MT 750
(Product Identification)
complies with the essential protection requirements of R & TTE Directive 1999/5/EC on the approximation of the laws of the Member States relating to Radio Spectrum Matters, EMC and Electrical Safety.
This declaration applies to all specimens manufactured in accordance with the attached technical documentation described in Annex II of the Directive which forms part of this declaration.
Assessment of compliance of the product (class 2.6) with the requirements relating to the essential requirements according to Article 3 R & TTE was based on Annex IV of Directive 1999/5/EC and the following standards:
Radio Spectrum: EN 300 296-1 V1.1.1 (2001-03)
EN 300 296-2 V1.1.1 (2001-03)
EMC: EN 301 489-1 V1.4.1 (2002-08)
EN 301 489-3 V1.3.1 (2002-08)
Electrical Safety: IEC 60950-1:2001 / EN 60950-1:2001
RF Exposure: EN 50392 (2004-02)

Warranty & Customer Service
For warranty and customer service information, please contact your local dealer.

CE 06820
For use in EU countries, subject to local laws and regulations.
CEETM is a trademark of Cobra Electronics Corporation, USA.
Stylized design and microTALK[®] are registered trademarks of Cobra Electronics Corporation, USA.
©2006, Cobra Electronics Europe Limited
Dunage House, Northumberland Avenue
Dun Laoghaire, County Dublin, Ireland
www.cobra.com

5 Call Tone Settings
You can choose between five (5) different call tone settings to transmit a unique call alert.

To Change a Call Tone Setting:

- Press the MODE button until the letter "C" and the current call tone number (1 to 5) is displayed. The current call tone will sound for two (2) seconds.
- Press the CHANNEL UP or CHANNEL DOWN button to hear the other call tone settings.

Call Tone Setting
The current call tone will sound for two (2) seconds.

Call Tone Setting
The current call tone will sound for two (2) seconds.

Call Tone Setting
The current call tone will sound for two (2) seconds.

Call Tone Setting
The current call tone will sound for two (2) seconds.

DUBLIN, IRELAND MIKE KAVANAGH