



Bluefin Led Underwater lights.

P4POLY/P4BRONZE/P4ALLOY SINGLE/DUAL and RGBW Installation manual.

Thank you for choosing Bluefin LED underwater lights, our products have been designed and tested extensively to ensure optimum performance and longevity.

All Bluefin Led lights are water tested so please be aware there may be moisture present on the light. All Piranha P4 lights are available in Poly, Bronze or Aluminium. If you have ordered the Aluminium (A) option please be aware that these have been **Hard PTFE Anodised** to form a corrosion resistant coating. Please take care not to damage this coating when installing the light. The Aluminium lights can be used on **Aluminium hulls or Fiberglass hulls ONLY**. The Bronze lights can only be used on fibre glass hulls only and **not to be mounted to any Metal/Conductive hull or your warranty will be void. If you are fitting to a Metal or Carbon Fibre hull you must isolate the light and screws using a Delrin sleeve which can be supplied upon request.**

The Poly light (P) option can be used on all hull types.

Please ensure that your product is installed as per our instructions below, failure to do so may invalidate your warranty.

Specs: electrical/fuse ratings

	Voltage	Current	Fuse rating
Piranha P4P	12/24V	12v 1amp/24v 0.5amp	3amp
Piranha P4B/A	12/24V	12v 2amp/24v 1amp	3amp
Piranha P4CC	12/24V	12v 2amp/24v 1amp	3amp
Piranha P4 DUAL	12/24V	12v 2amp/24v 1amp	3amp

Warnings:

- Do not attempt to install the lights whilst the boat is in the water.
- Ensure that the correct voltage is used for the light.
- Ensure that the in-line fuse is installed with the correct fuse rating per the light installed.
- Ensure that you use the Screws provided with the red washer fitted and only hand tightened **(failure to do so will invalidate your warranty)**.



- Do not use power tools to screw the lights to the hull.
- Ensure that the supplied gel connector is used to make a watertight connection or your **warranty will be Void.**
- **Do not remove the inline HYDRO LOCK or your warranty will be void.**
- Do not hold the light by the cable.
- Do not use abrasives on the lenses.
- Do not look directly into the light at close proximity
- Lights must be mounted a minimum of 300mm from any Anodes.
- Do not mount lights directly underneath Anodes.
- As Galvanic currents & corrosion are external factors any type of damage caused by galvanic affects are not covered by BluefinLEDs warranty policy.

Tools required for installation:

- 3mm(3/32") drill bit
- 15mm(19/32") drill bit
- Drill
- Posi head hand screwdriver
- Marine sealant 3M 5200/4000UV, Sika flex 291i or equivalent (**do not use 3M 4200**)

Installation:

Before installation please ensure the red line is horizontal (the label is fitted to the face of the light), this is to ensure you install the light perpendicular to the water line. Ensure that all lights are fitted the same. If the lights are not all orientated the same way the light will not appear even (different angles) in the water (see fig 4)

For optimum affect effect the light should be positioned between 8-12" (200-300mm) below the water line and at a 90 deg angle. Recommended spacing from 1-8'(0.5mtr) to 3-11' (1.2mtrs) between the lights.

Please use the card template for drilling of holes.

Drill a 15mm (19/32") hole for the cable access through the hull, ensuring that there are no obstructions internally in the hull.

Drill 2.5mm (3/32") pilot holes to match the mounting holes on the light. (Within the packaging there is a mounting template for drilling these holes)

Key the area to where the light is to be mounted with abrasive sand paper to ensure there is a clean area for the marine sealant to bond to.

Apply marine sealant to the rear of the light on the circumference of the light and around the base of the cable gland to ensure a complete continuous bead of sealant is applied in both areas. (see fig 2/3)

Feed the cable through the hole and mount the light to the hull using the **screws provided**.

Wipe off any excess sealant and ensure the light is seated correctly without any gaps in the sealant. (It is good practice to have excess marine sealant to clean off as this will help assure a water tight seal to the hull)

Electrical connection:

Ensure you use the IP68 GEL CONNECTOR supplied to connect to the boats wiring or you Warranty will be void (fig 5/6/7).

You will notice an inline HYDRO LOCK attached to your cable (Fig 1). If this is removed your warranty will be void.

Care should be taken when planning your electrical feeds/cables to the lights so as to ensure voltage drop between the batteries or power supply is minimised, on 12V systems this is especially important as the lower system voltage means a high current requirement which in turn means the potential for more voltage drop in the cable runs & connections.

If the cable gauge & connections are not sufficient for the lighting load attached you may experience incorrect operation of the lights & intermittent illumination as the supply dips below specification.

Please see the wire gauge guide attached to the instruction manual.

For help with calculations always consult with a qualified professional or contact Bluefin LED directly.

Attach the light cable to the VDC power on the boat ensuring that you use the in line fuse supplied connected to the positive(red) wire, ensure that you use the heat shrink provided to create a water tight fit into the fuse holder. (see fig 5)

P4CC Only

When installing P4CC lights it is advised to wire the lights up to a single switch so that all of the lights operate in sequence with each other. It is also advised that you choose an appropriate switch that has the correct power rating for the amount of lights being installed (please see the P4CC current values above).

P4 Dual Colour Only

When installing P4 Dual Colour lights it is advised to wire the lights up to a single switch so that all of the lights operate in sequence with each other. It is also advised that you choose an appropriate switch that has the correct power rating for the amount of lights being installed (please see the P4 Dual Colour current values above).

Fig 1



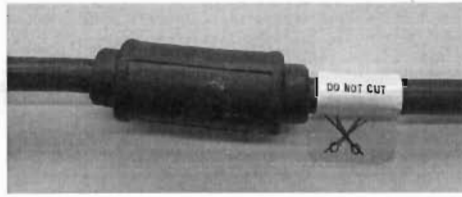


Fig 2

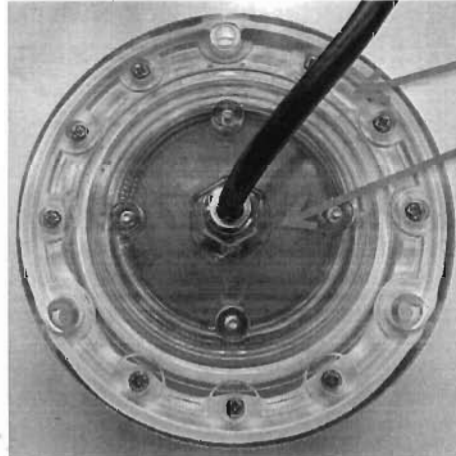


P4 POLY
Apply Sealant
around this edge
and around the
cable gland.

Fig 3

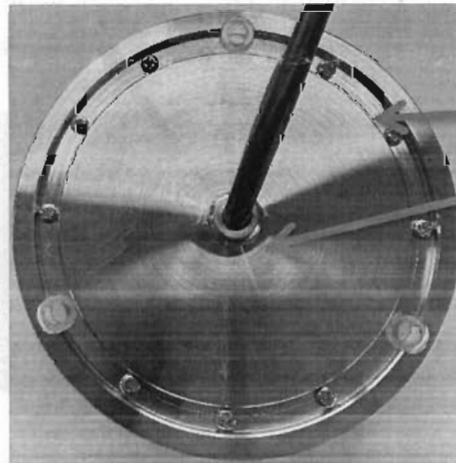

P4 BRONZE/ALLOY
Apply Sealant
around this edge
and around the
cable gland.

Fig 4

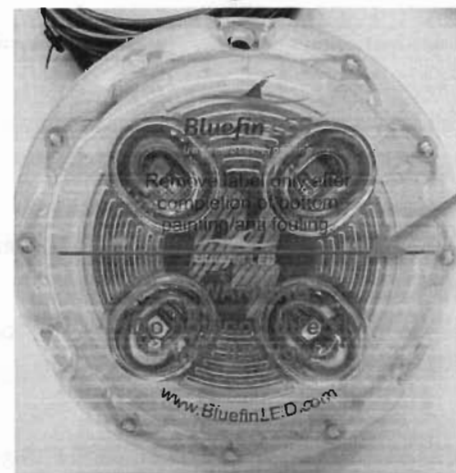

Ensure Red line
is Horizontal to
the waterline on
all lights.
Remove lens
label after
bottom painting
and before use.

Fig 5

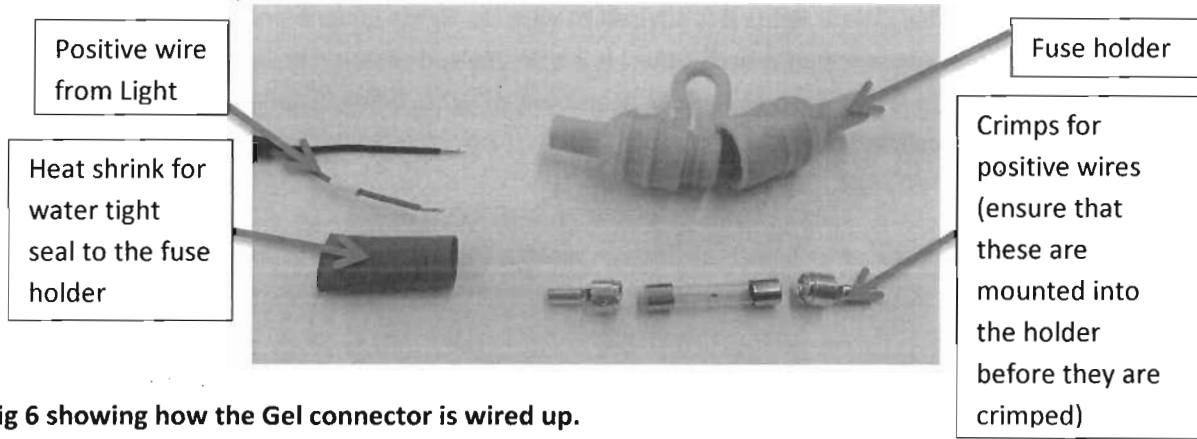


Fig 6 showing how the Gel connector is wired up.

Fig 7 showing how the finished Gel connector should look when finished.

The IP68 GEL CONNECTOR MUST BE INSTALLED OR YOU WARRANTY WILL BE VOID.

Fig 6


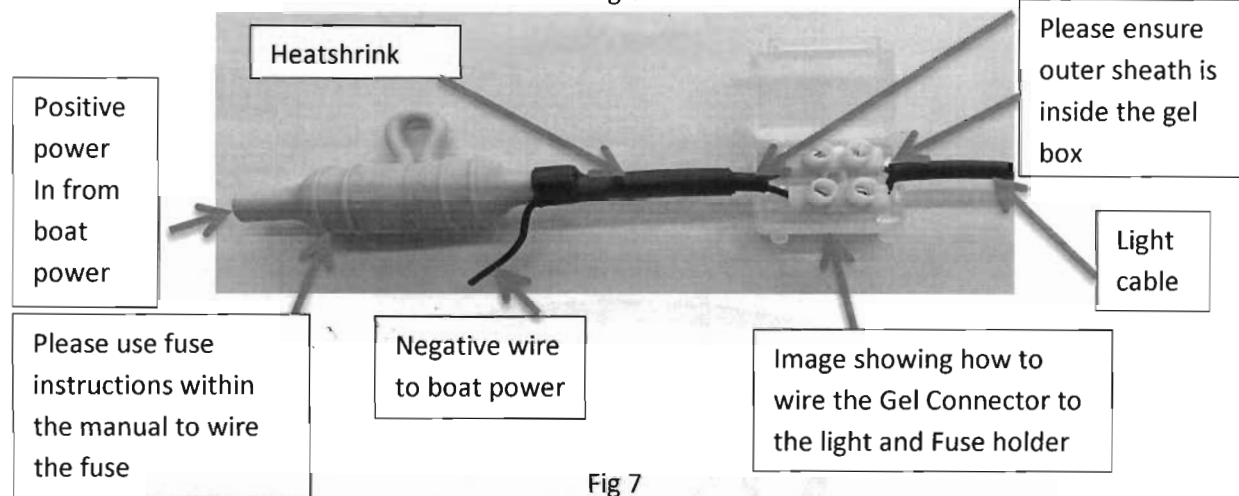


Fig 7

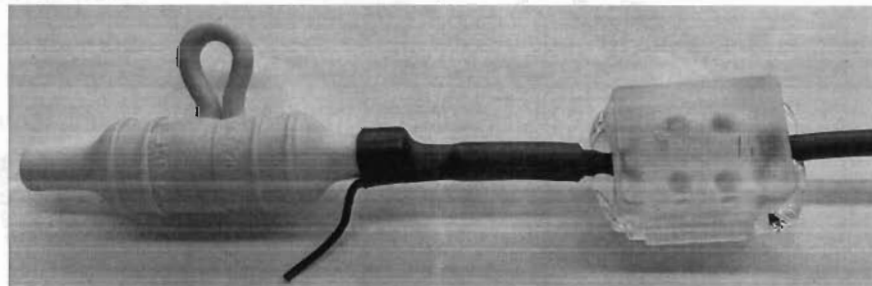

Testing:

Test the light before installation ensuring that you use the correct voltage and the light is illuminated correctly.

After installation ensure again that the light is illuminated correctly before the boat goes back into the water and the lens label is removed.

After you boat goes back into the water check internally for water ingress around where the light is installed.

P4 Single colour Operation

The light has internal indicator LED's for fault finding, these are as follows:

- Over voltage will flash red.(check the voltage to the light)
- Under voltage will show a constant red. (check the voltage to the light)
- Over temperature will show amber.(allow the light to cool down and check if submerged)

P4CC (Colour change) Operation.

1. When powered up for the first time or from reset, the light will appear in white and cycle through the range of colours and will keep cycling until stopped by any of the steps below.

2. To pick a particular colour turn the light off and then on again quickly and the chosen colour will be selected (approx. 1 Sec power cycle, this may take a little practice as too fast or slow will not detect).
3. If you switch off and on again quickly for the second time the light will start to strobe/strobe.
4. Switch off the light and leave for over 5 seconds, when the light is switched back on the light will reset back in the white mode.
5. When the light colours become out of sync simply repeat step 4 to re-set to initial colour cycle mode, the more lights installed this process may need to be more frequently repeated.

P4 Dual Colour Operation

1. When first turned on the light will start up in Dual Blue/White mode, if you turn the light off and on again quickly it will then go to Blue mode. If you turn the light off and on again quickly it will then go to White mode. If you turn the light off and on again quickly it will go to Dual Blue/White Strobe mode(random flash)
2. When the light is turned off for more than 5 secs it will return to standard mode.
3. The light output will adjust itself dependent on the surrounding temperature conditions.

The light has internal indicator LED's for fault finding, these are as follows:

- Over voltage will flash red.(check the voltage to the light)
- Under voltage will show a constant red. (check the voltage to the light)
- Over temperature will show amber.(allow the light to cool down and check if submerged)

Maintenance:

Regularly check the installation for water ingress.

Only clean the light with a soft bristle brush.

Warranty:

For any warranty issues please contact your point of sale retailer or go to www.bluefinled.com for further **advice**.

Bluefin LED LTD warrants the lights/hardware it manufactures and produces to be free from defects in workmanship and materials for a period of two years, starting from the date of original purchase, as recorded on the sales receipt.

The warranty is non-transferable and limited to the original purchaser of the product. During the two year **warranty** period Bluefin LED will repair or replace the defective item (at its option) at no additional charge on a "like for like" basis. Products either repaired or replaced under this warranty shall only be warranted for the unexpired portion of the warranty applying to the original product(s).

Bluefin LED is not responsible for labour charges to remove or replace lights or for haul-out fees. No refunds will be given.

This limited warranty does not extend to any products which have been damaged as a result of misuse, abuse, improper installation/modification, galvanic corrosion, failure to follow and adhere to installation instructions provided by Bluefin LED, improper shipping, neglect, damage caused by disasters such as fire, flood, lightning "acts of god", installation by unqualified personnel. **Installer please ensure that the SERIAL NUMBERS of the lights are written below and the manual is handed over to the end user.**

Please make a note of the serial numbers of the lights here.

SERIAL NUMBERS

--	--	--	--	--	--

Bluefin LED

Cottage Farm, Cottage Lane,
Norton Juxta Twycross, Atherstone. CV9 3QH
Tel: 01827 880450

Email: info@bluefinled.com

Registered Address: Square Rig Limited, 1/2 Bluefin Led, Cottage Farm, Cottage Lane, Norton Juxta Twycross, Atherstone, CV9 3QH
Company Registration Number: 08871451 VAT Number: 179 2690 64



Wire Gauge selection guide using information from ABYC E-11 & US Coast Guard guidelines for marine electrical installations

Circuit Type		Current flow in Amps									
10% V Drop Low-Power Non Critical (P series Single colour)	3% V Drop High-Power/Critical (H, S & GW Plus colour change Series)	5A	10A	15A	20A	25A	30A	40A	50A	60A	
20ft	6m	16 AWG	16AWG	14AWG	14AWG	12AWG	10AWG	8AWG	6AWG	6AWG	
30ft	9m	15 AWG	14AWG	12AWG	12AWG	10AWG	8AWG	6AWG	6AWG	6AWG	
50ft	15m	15 AWG	12AWG	10AWG	10AWG	8AWG	6AWG	6AWG	4AWG	4AWG	
65ft	20m	20ft	14AWG	10AWG	8AWG	6AWG	6AWG	4AWG	4AWG	4AWG	
80ft	24m	25ft	12AWG	8AWG	6AWG	6AWG	4AWG	4AWG	4AWG	4AWG	
100ft	30m	30ft	10AWG	6AWG	4AWG	4AWG	2AWG	2AWG	2AWG	2AWG	
130ft	40m	40ft	8AWG	4AWG	2AWG	2AWG	1AWG	1AWG	1AWG	1AWG	
165ft	50m	50ft	6AWG	2AWG	1AWG	1AWG	1AWG	1AWG	1AWG	1AWG	
200ft	61m	60ft	4AWG	1AWG	1AWG	1AWG	1AWG	1AWG	1AWG	1AWG	
		70ft	2AWG	1AWG	1AWG	1AWG	1AWG	1AWG	1AWG	1AWG	
		80ft	1AWG	1AWG	1AWG	1AWG	1AWG	1AWG	1AWG	1AWG	
		90ft	1AWG	1AWG	1AWG	1AWG	1AWG	1AWG	1AWG	1AWG	
		100ft	1AWG	1AWG	1AWG	1AWG	1AWG	1AWG	1AWG	1AWG	
		110ft	1AWG	1AWG	1AWG	1AWG	1AWG	1AWG	1AWG	1AWG	
		120ft	1AWG	1AWG	1AWG	1AWG	1AWG	1AWG	1AWG	1AWG	
		130ft	1AWG	1AWG	1AWG	1AWG	1AWG	1AWG	1AWG	1AWG	

To use for BluefinLED underwater lights select the appropriate current Column for you lights, power & quantity from the top row.
 Then at the point the Column & row crosses read the cable suggestion in US or EU gauges for your installation.
Failure to install the correct power feeds may invalidate your warranty, if in doubt please consult with BluefinLED or a qualified professional.